
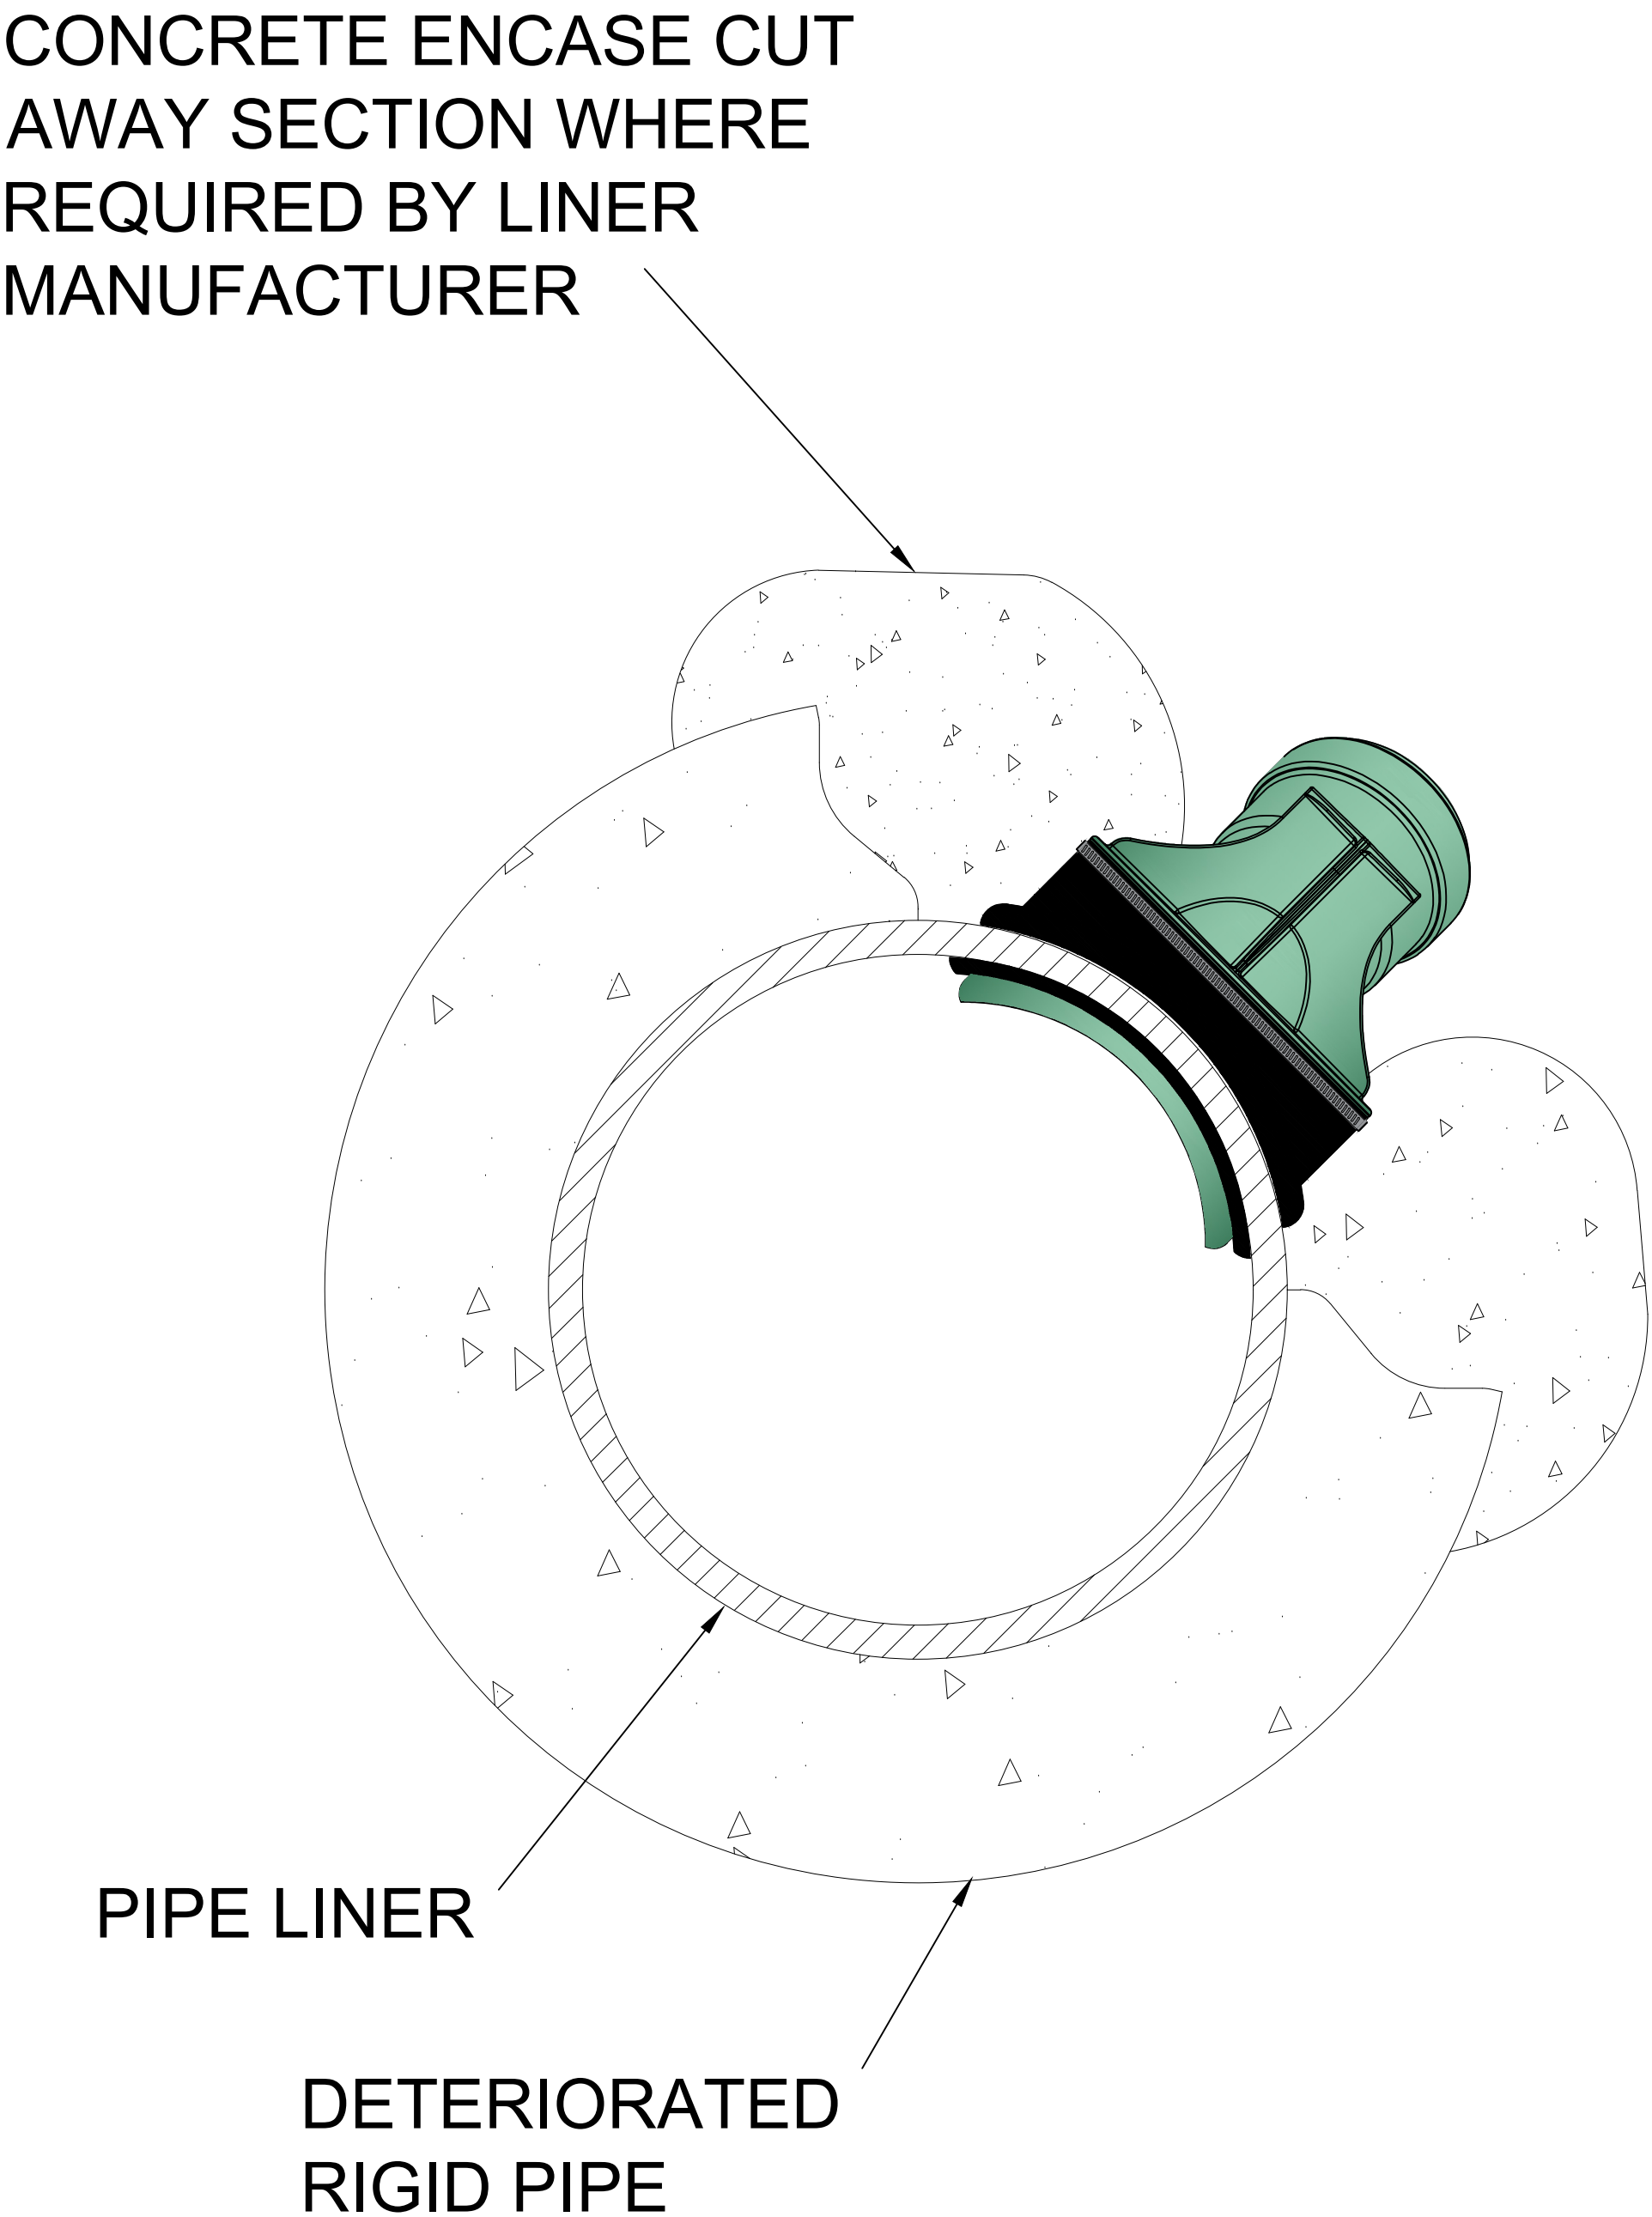


INSERTA WYE™ FOR LINED RIGID PIPE APPLICATIONS (CIPP)

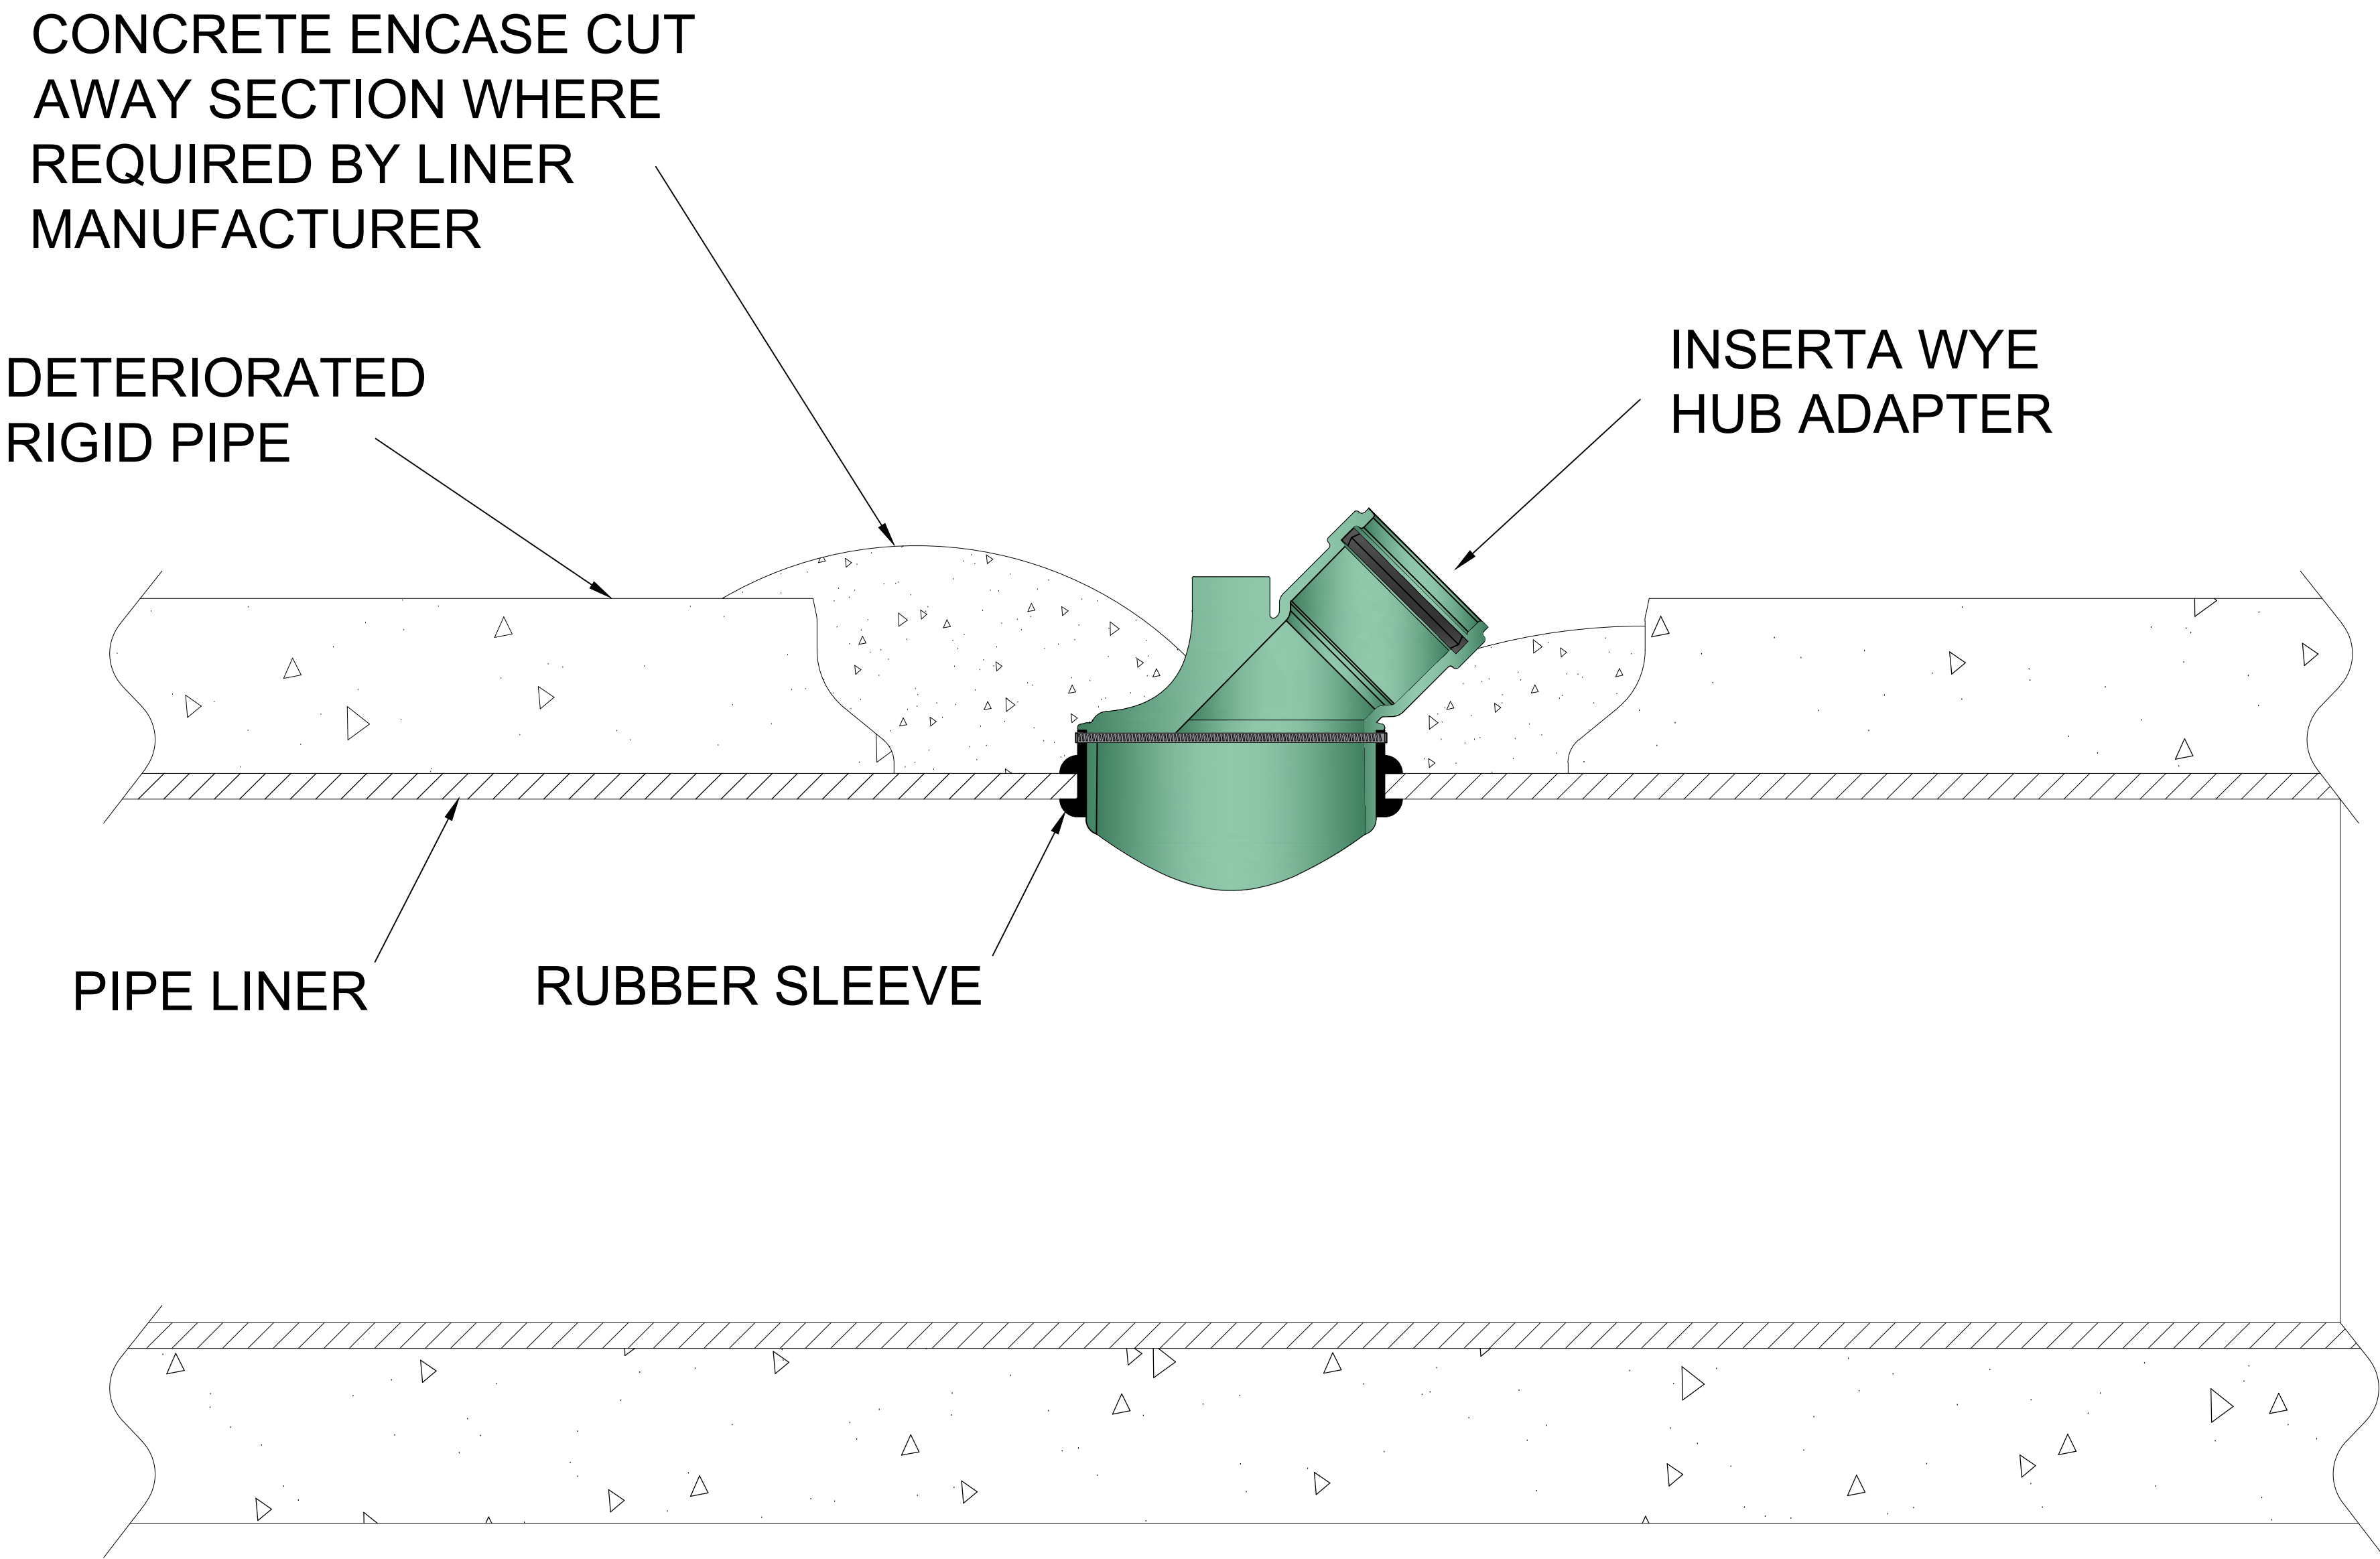

- INSTALLATION INSTRUCTIONS:**
1. MARK AREA TO BE TAPPED ON SURFACE OF RIGID PIPE. WORKING AREA SHOULD BE 2" WIDER THAN DIAMETER OF INSERTA WYE BODY.
 2. BREAK AWAY RIGID PIPE SECTION TO BE TAPPED AND EXPOSE NEW LINER SECTION.
 3. BRUSH AND CLEAN PIPE LINER SURFACE AND REMOVE DAMAGED SECTIONS OF RIGID PIPE.
 4. CORE HOLE INTO LINER WITH APPROPRIATE INSERTA TEE HOLE SAW, PER SIZING ON STD-2102.
 5. INSTALL INSERTA WYE TAP CONNECTION PER PROVIDED INSTALLATION INSTRUCTIONS.
 6. ENCASE CUT OUT SECTION OF RIGID PIPE WITH CONCRETE WHERE REQUIRED BY LINING MANUFACTURER.

NOTE: FOR INSTALLATION INSTRUCTIONS, REFER TO DETAIL STD-2100. FOR PROTRUSION INFORMATION, REFER TO DETAIL STD-2101. FOR HOLE SAW INFORMATION, REFER TO DETAIL ST-2102.

ADVANCED DRAINAGE SYSTEMS, INC. ("ADS") HAS PREPARED THIS DETAIL BASED ON INFORMATION PROVIDED TO ADS. THIS DRAWING IS INTENDED TO DEPICT THE COMPONENTS AS REQUESTED. ADS HAS NOT PERFORMED ANY ENGINEERING OR DESIGN SERVICES FOR THIS PROJECT, NOR HAS ADS INDEPENDENTLY VERIFIED THE INFORMATION SUPPLIED. THE INSTALLATION DETAILS PROVIDED HEREIN ARE GENERAL RECOMMENDATIONS AND ARE NOT SPECIFIC FOR THIS PROJECT. THE DESIGN ENGINEER SHALL REVIEW THESE DETAILS PRIOR TO CONSTRUCTION. IT IS THE DESIGN ENGINEERS RESPONSIBILITY TO ENSURE THE DETAILS PROVIDED HEREIN MEETS OR EXCEEDS THE APPLICABLE NATIONAL, STATE, OR LOCAL REQUIREMENTS AND TO ENSURE THAT THE DETAILS PROVIDED HEREIN ARE ACCEPTABLE FOR THIS PROJECT.

INSERTA WYE FOR
CIPP APPLICATIONS

DRAWING NUMBER STD-2117



4640 TRUEMAN BLVD
HILLIARD, OH 43026

DRAWN BY:	SMW
DATE:	04/20/2026
OK'S BY:	ENG
SCALE:	NTS
SHEET:	1